


MAINTENANCE


AIR CLEANER

Remove the top shelter (page 3-16).

Disconnect the IAT sensor 2P (Gray) connector.
Remove the screws and air cleaner housing cover.

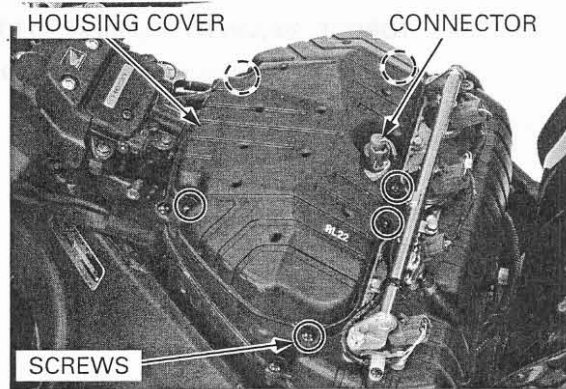


Replace the air cleaner elements in accordance with the maintenance schedule (page 4-4).

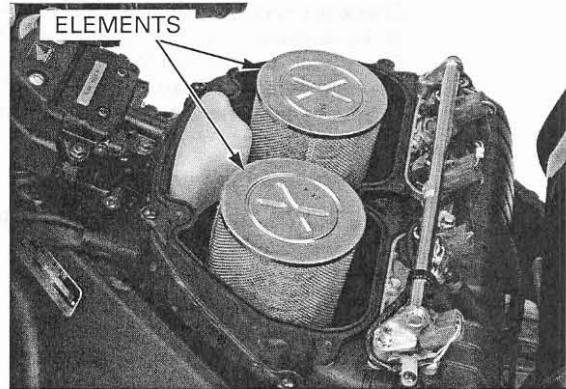

Install the air cleaner elements while aligning their bosses with the grooves in the air cleaner housing.

Install the removed parts in the reverse order of removal.

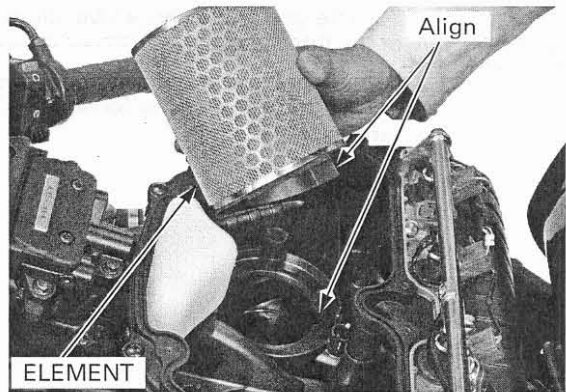

SPARK PLUG

REMOVAL

Be careful not to damage the radiator fins.

Remove the under cowls/middle cowls (page 3-7).

Remove the radiator lower mounting bolt.

