


Check that the sealing washer on the drain bolt is in good condition, and replace if necessary. Install and tighten the drain bolt.

TORQUE: 29 N-m (3.0 kgf-m, 22 lbf-ft)



OIL DRAIN BOLT/SEALING WASHER

Apply clean engine oil to the oil filter cartridge threads and new O-ring.

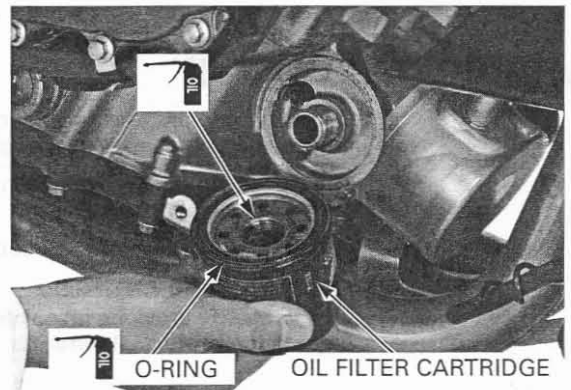

O-RING

OIL FILTER CARTRIDGE


Install the new oil filter and tighten it to the specified torque.

TOOL:

Oil filter wrench 07HAA-PJ70101

TORQUE: 26 N-m (2.7 kgf-m, 20 lbf-ft)

Install the radiator reservoir tank and bolt.

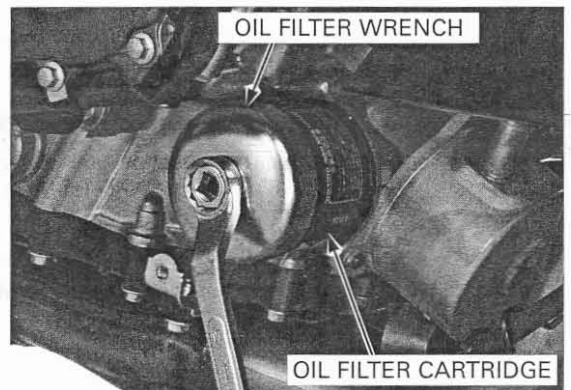

OIL FILTER WRENCH

OIL FILTER CARTRIDGE

Fill the crankcase with recommended engine oil.

OIL CAPACITY:

3.0 liter (3.2 US qt, 2.6 Imp qt) after draining

3.1 liter (3.3 US qt, 2.7 Imp qt) after oil filter change

Check that the O-ring on the oil filler cap is in good condition, and replace if necessary. Install the oil filler cap.

Start the engine and let it idle for 3 – 5 minutes. Stop the engine and wait 2 – 3 minutes and recheck the oil level.

Make sure there are no oil leaks.

Install the under cowls (page 3-7).



OIL FILLER CAP

O-RING