


REAR BRAKE

Place the motorcycle on a level surface, and support it in an upright position.
 Check the rear brake fluid level.
 If the level is near the lower level line, check the brake pad wear (page 4-31).

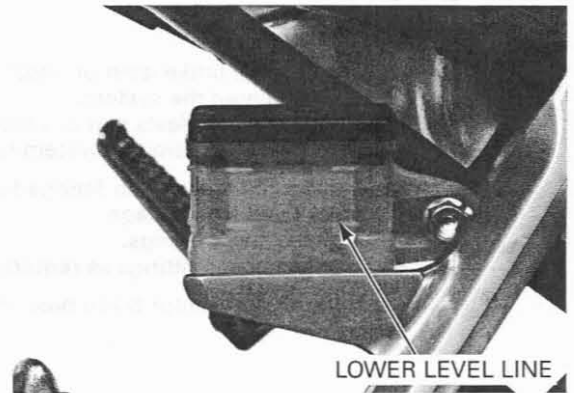

LOWER LEVEL LINE

BRAKE PAD WEAR

FRONT BRAKE PADS


Check the brake pads for wear.
 Replace the brake pads if either pad is worn to the bottom of wear limit groove.
 Refer to brake pad replacement (page 16-11).



WEAR LIMIT GROOVE

REAR BRAKE PADS

Check the brake pads for wear.
 Replace the brake pads if either pad is worn to the bottom of wear limit groove.
 Refer to brake pad replacement (page 16-13).

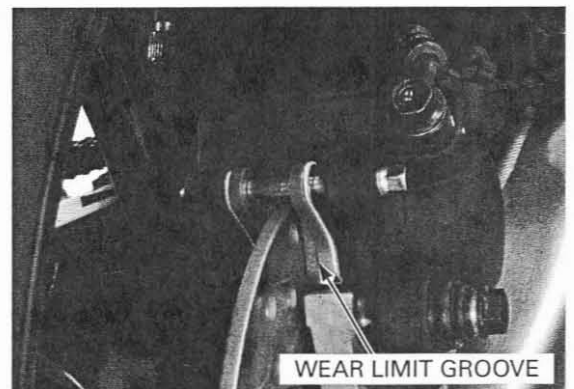

WEAR LIMIT GROOVE