


## LUBRICATION SYSTEM

Install and tighten the EOP switch to the specified torque while holding the switch base.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

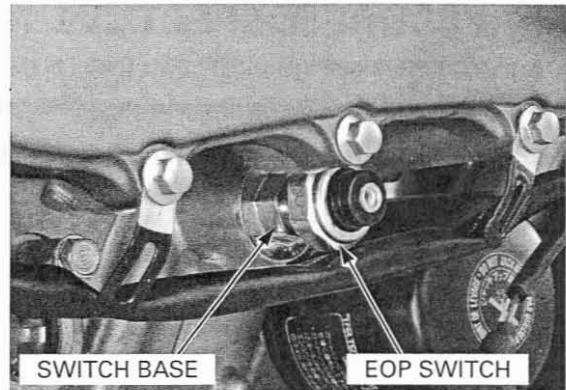


Connect the EOP switch wire terminal to the switch and tighten the screw to the specified torque.

**TORQUE: 2.0 N·m (0.2 kgf·m, 1.4 lbf·ft)**

Install the dust cover.

Install the under cowl (page 3-7).

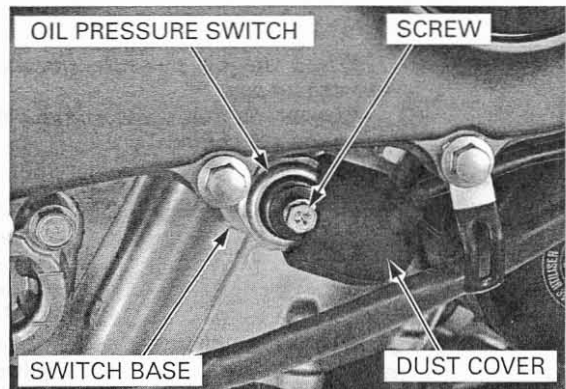


## OIL STRAINER/PRESSURE RELIEF VALVE

### REMOVAL

Drain the engine oil (page 4-22).

Remove the exhaust pipe (page 3-30).

Remove the oil pan SH flange bolts and oil pan.

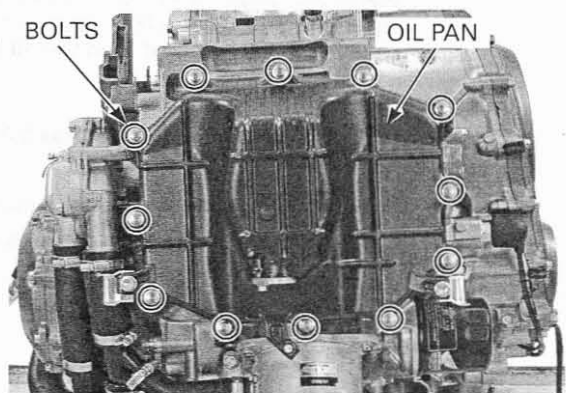

Remove the oil strainer and packing.

Clean the oil strainer screen.

