


FUEL SYSTEM (Programmed Fuel Injection)

Loosen the engine side insulator band screws using a long phillips screwdriver.

Do not hold the fuel rail on the throttle body to remove the throttle body, or it may be damaged.

Remove the throttle body from the cylinder head.

- Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed. If debris is allowed to enter the ports the engine may be damaged.
- Do not snap the throttle valve from fully open to fully closed after the throttle cable has been removed. It may cause incorrect idle operation.

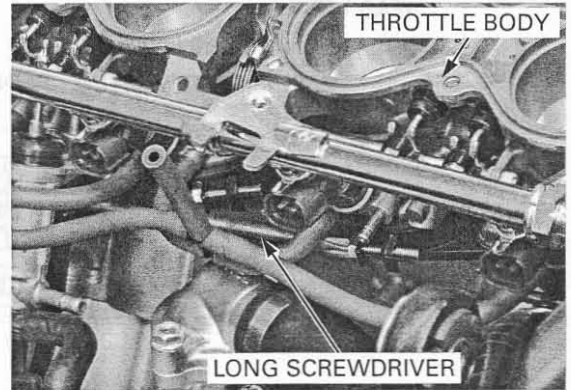

- Do not damage the throttle body. It may cause incorrect throttle and idle valve synchronization.
- *The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.*
- *Do not loosen or tighten the painted white bolts and screws of the throttle body. Loosening or tightening them can cause throttle and idle valve synchronization failure.*

TOP VIEW:

