

## ENGINE REMOVAL/INSTALLATION


### ENGINE REMOVAL

Remove the following:

- Under cowls/middle cowl (page 3-7)
- Exhaust pipe (page 3-30)
- Fuel tank (page 6-36)
- Radiator reserve tank (page 7-20)
- Air cleaner housing (page 6-40)
- Throttle body (page 6-47)


Disconnect the following connectors:

- Vehicle speed sensor 3P (Natural) connector
- Engine sub-harness 2P (Black) connector

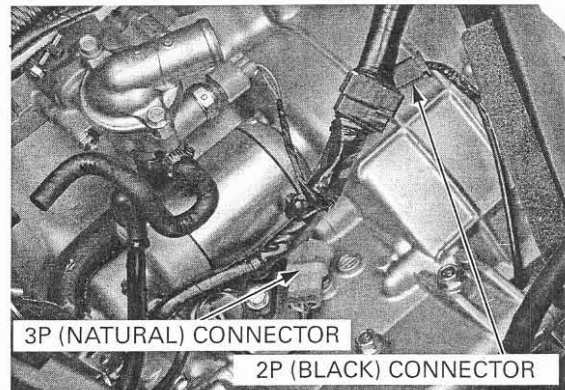


Remove the terminal nut and disconnect the starter motor cable from the starter motor.

Remove the starter motor mounting bolt and starter motor ground cable.

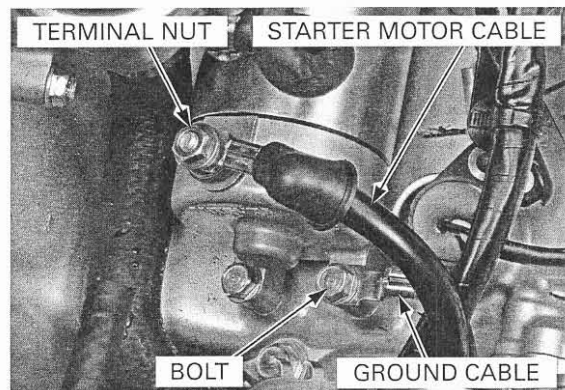

Disconnect the camshaft position sensor 2P (Black) connector.

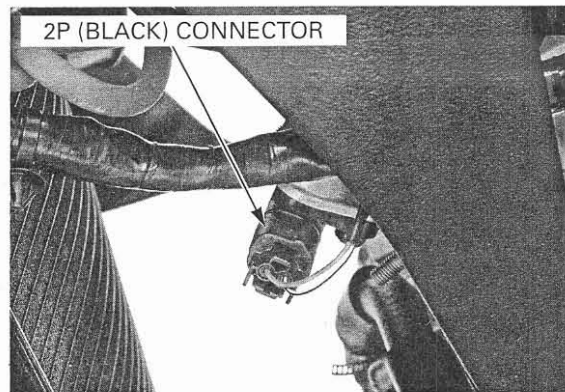

Disconnect the alternator 3P (Natural) connector and side stand switch 2P (Green) connector.

