



CYLINDER HEAD/VALVES

Remove the PAIR check valves from the cylinder head cover.

Check the PAIR check valve for wear or damage, replace if necessary.

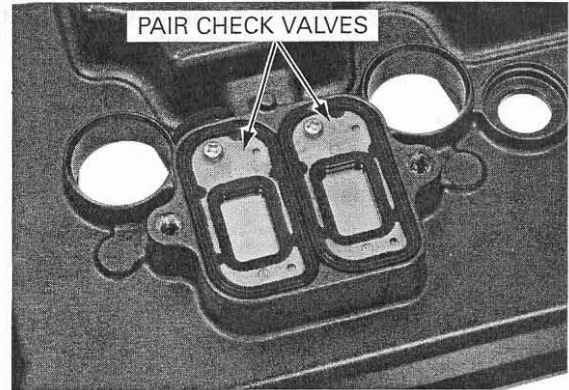


Remove the port plates from the cylinder head cover.

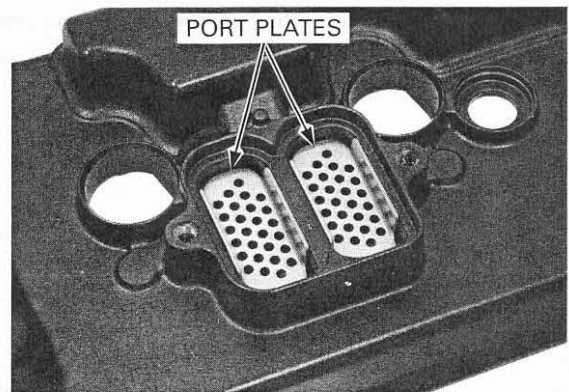

CAMSHAFT REMOVAL

Remove the cylinder head cover (page 9-6).

Avoid damaging the CMP (camshaft position) sensor while removing the camshafts, remove the bolt and CMP sensor from the cylinder head.

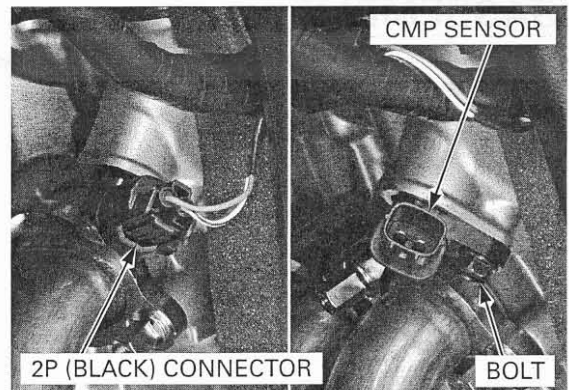

Remove the timing hole cap and O-ring.

