


CLUTCH/STARTER CLUTCH

Remove the master piston assembly and spring.

Clean the inside of the cylinder and reservoir with brake fluid.

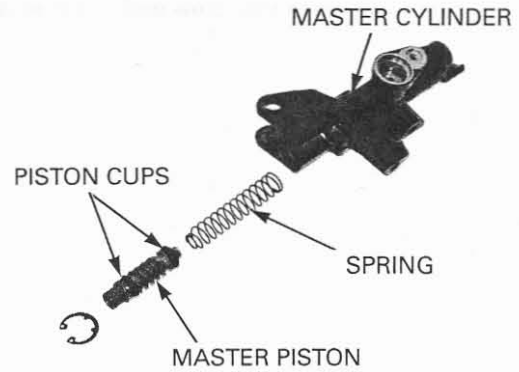

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.
Check the master cylinder and piston for abnormal scratches.

Measure the master cylinder I.D.

SERVICE LIMIT: 12.755 mm (0.5022 in)

Measure the master piston O.D.

SERVICE LIMIT: 12.645 mm (0.4978 in)



ASSEMBLY

