



Remove the clutch spring bolts, springs in a criss-cross pattern in two to three steps, then remove the pressure plate.

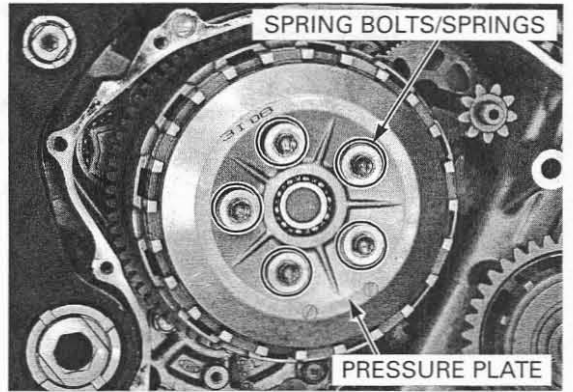


Remove the clutch lifter piece and lifter rod.

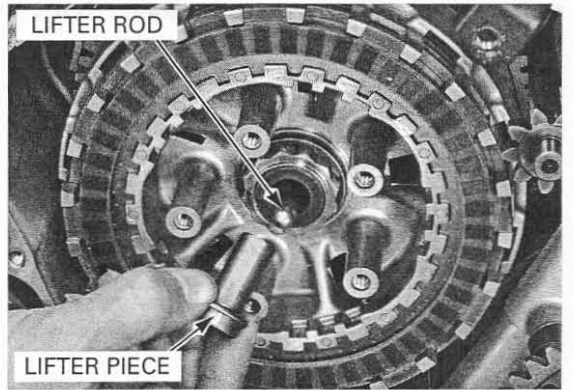

Remove the following:

- Two clutch disc A
- Six clutch disc B
- Seven clutch plates
- Friction spring
- Spring seat

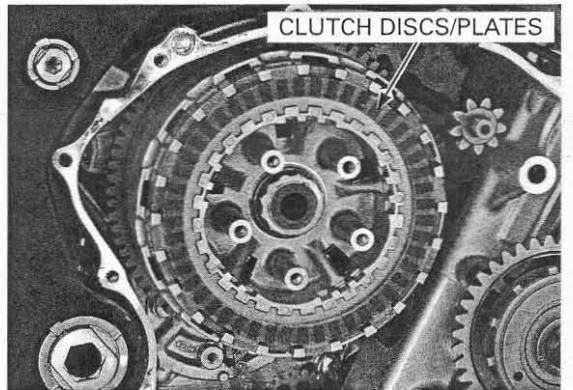

Unstake the clutch center lock nut.

