

Connect the crankshaft position sensor 2P (Red) connector.

Add the recommended engine oil (page 4-22).
Install the middle cowls/under cowls (page 3-7).

