

# 11. ALTERNATOR

---

COMPONENT LOCATION .....	11-2	STATOR .....	11-4
SERVICE INFORMATION .....	11-3	FLYWHEEL .....	11-5
ALTERNATOR COVER REMOVAL .....	11-4	ALTERNATOR COVER INSTALLATION .....	11-7