



FRONT WHEEL/SUSPENSION/STEERING

Remove the left handlebar grip and switch end cover.

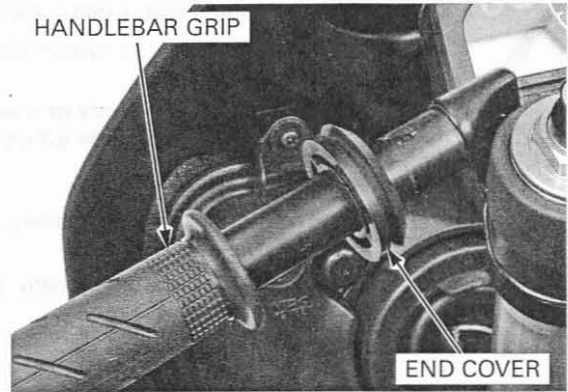


Disconnect the front brake light switch connectors from the switch.

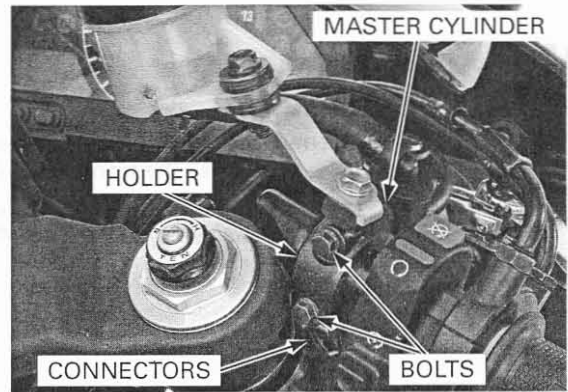

Keep the brake master cylinder upright to prevent air from entering the hydraulic system.

Remove the master cylinder holder bolts, holder and brake master cylinder assembly.

Remove the screws and right handlebar switch.

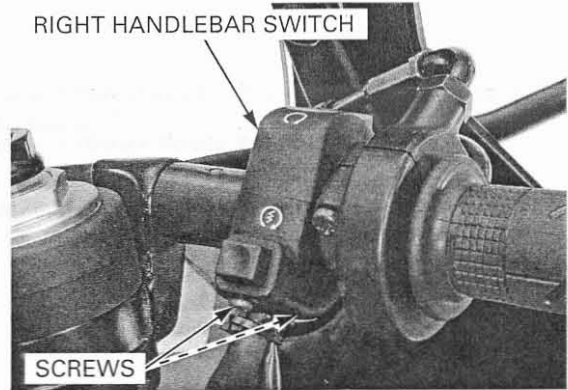

Remove the screws and throttle cable housing cover.

