


Attach the handle to the damper rod holder after installing the spring collar and joint collar.

Extend the fork damper fully and install the damper rod holder onto the damper rod adjust case.

TOOL:
Damper rod holder 070MB-MEL0200 or 070MB-MELC200


Install the spring collar and joint collar.

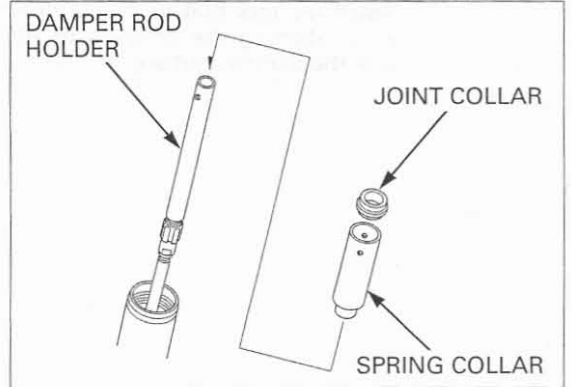


Attach the handle to the damper rod holder, then lower the spring collar while pulling up the damper rod holder.

Attach the 14 mm wrench to the damper rod adjust case as shown.

Make sure that the damper rod adjust case is firmly fixed, then remove the damper rod holder.

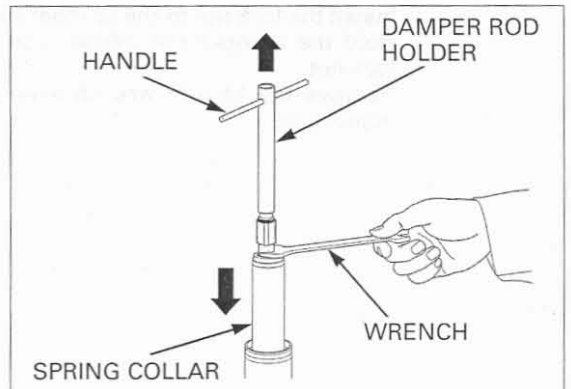

Apply fork fluid to new O-rings and install them to the fork bolt.

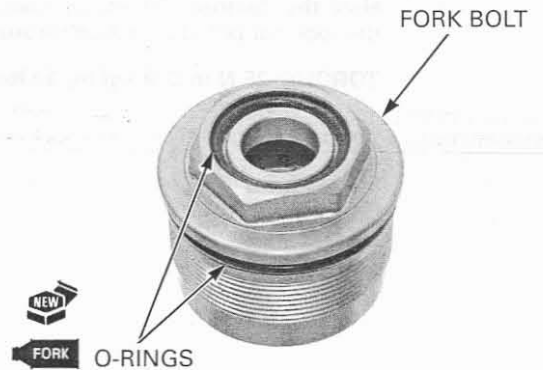

Turn the pre-load adjusting plate clockwise until it seats lightly.

