

FRONT MASTER CYLINDER

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a shop towel over these parts whenever the system is serviced.


REMOVAL

Drain the front hydraulic system (page 16-7).


Disconnect the brake light switch connectors.

Avoid spilling fluid on painted, plastic, or rubber parts.

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

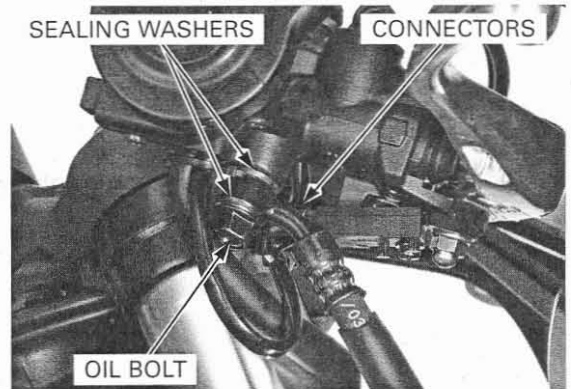

Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

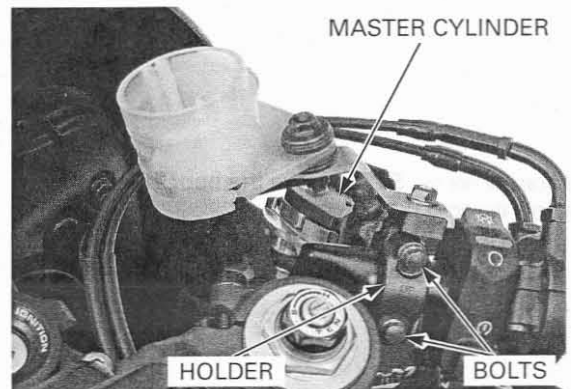

DISASSEMBLY

Remove the dust cover and snap ring.

TOOL:

Snap ring pliers

07914-SA50001

Remove the bolt and brake reservoir from the master cylinder.

Remove the O-ring from the reservoir joint.

