


INSPECTION

Clean the inside of the cylinder and reservoir with clean brake fluid.
 Check the piston boot, piston cups for damage or deterioration.
 Check the master cylinder and piston for abnormal scratches.
 Check the spring for fatigue or damage.

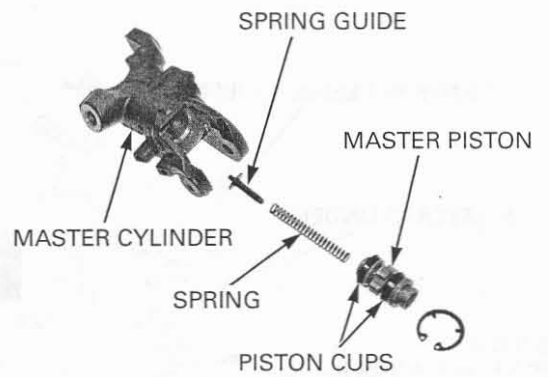

Measure the master cylinder I.D.

SERVICE LIMIT: 17.515 mm (0.6896 in)



Measure the master cylinder piston O.D.

SERVICE LIMIT: 17.309 mm (0.6815 in)

