

Remove and discard the brake pedal joint cotter pin. Remove the nut, washers and joint bolt, and disconnect the push rod lower joint from the brake pedal. Unhook the brake light switch spring and brake pedal return spring from the brake pedal. Remove the snap ring and thrust washer, then

Remove the snap ring and thrust washer, then remove the brake pedal and wave washer.

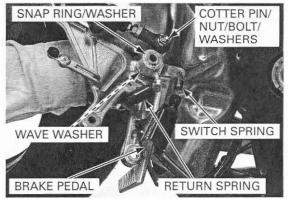

INSTALLATION

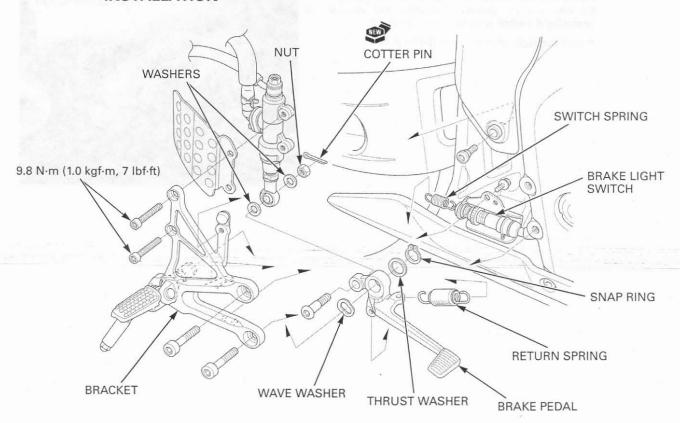

Apply grease to the sliding surface of the brake pedal and pivot shaft.

Install the wave washer, brake pedal, thrust washer and snap ring onto the brake pedal pivot.

Connect the push rod lower joint to the brake pedal and install the joint bolt and nut with washers.

Tighten the nut and secure it with new cotter pin. Install the brake pedal return spring and brake light switch spring.

