


REMOVAL/INSTALLATION

Remove the air cleaner housing (page 6-40) and connector covers (page 20-18).

Disconnect the ignition switch wire 2P (Brown) connector.

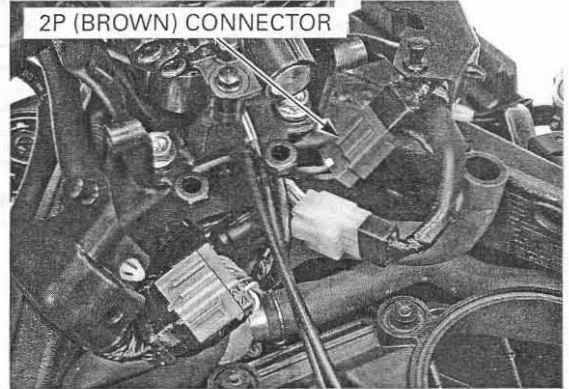


Remove the top bridge (page 14-11).

Remove the mounting bolts and ignition switch. Install the ignition switch to the top bridge. Tighten the new ignition switch mounting bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)

Install the removed parts in the reverse order of removal.

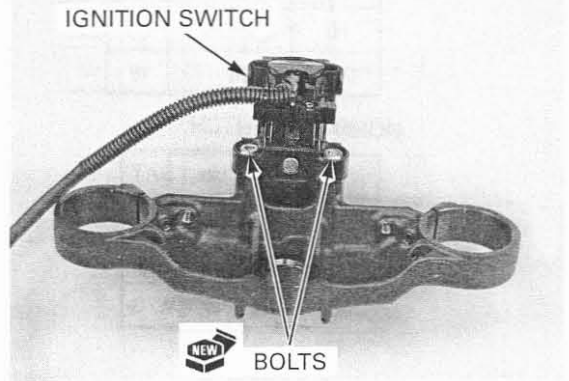

HANDLEBAR SWITCHES

Remove the air cleaner housing (page 6-40).

- Disconnect the handlebar switch connectors.
- Right handlebar switch: 8P (Natural) connector
 - Left handlebar switch: 12P (Gray) connector

Check for continuity between the wire terminals of the handlebar switch connector. Continuity should exist between the color coded wire terminals as follows:

ENGINE STOP SWITCH:

	IG	BAT
OFF		
RUN	○—○	
COLOR	BI	W/BI

STARTER SWITCH:

	BAT	ST	H/L
FREE	○—○		○
PUSH	○—○		
COLOR	BI/R	Y/R	Bu/W

