

FRAME		
LOCATION	MATERIAL	REMARKS
Steering head bearing sliding surface Steering head dust seal lips Swingarm pivot bearing Swingarm pivot dust seal lips Front wheel dust seal lips Rear wheel dust seal lips Rear wheel side collar inner surface Shock absorber needle bearing Shock absorber dust seal lips Shock link needle bearing Shock link dust seal lips Footpeg sliding area Passenger footpeg sliding area Left front brake caliper pivot bearing sliding surface Left front brake caliper pivot oil seal sliding surface Left fork needle bearing sliding surface Left fork dust seal sliding surface Rear brake pedal pivot sliding area Throttle pipe sliding area Seat catch hook	Multi-purpose grease	
Side stand pivot surface Main stand pivot surface	Molybdenum disulfide grease	
Shock absorber spring adjuster cam surface	Molybdenum paste	
Steering stem top thread Throttle cable casing inner Brake pipe joint threads	Engine oil	
Brake master cylinder cups Brake caliper piston seals	DOT 4 brake fluid	
Brake caliper dust seals Front brake lever pivot and piston tips Second master cylinder boot inside and push rod tips Rear master cylinder boot inside and push rod tips Brake caliper slide pin surface	Silicone grease	
Brake caliper slide pin threads Rear master cylinder hose joint screw threads Fork socket bolt threads Driven sprocket stud bolt threads	Locking agent	
Handle grip rubber inside	Honda Bond A	
Fork cap O-ring Fork oil seal lips	Fork fluid	