



FRAME/BODY PANELS/EXHAUST SYSTEM

Release the wire harness from the wire clamp.

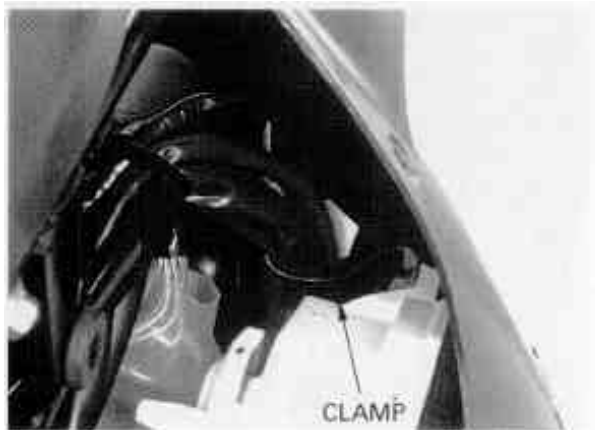

Remove the trim clips between the upper cowl and ram duct.

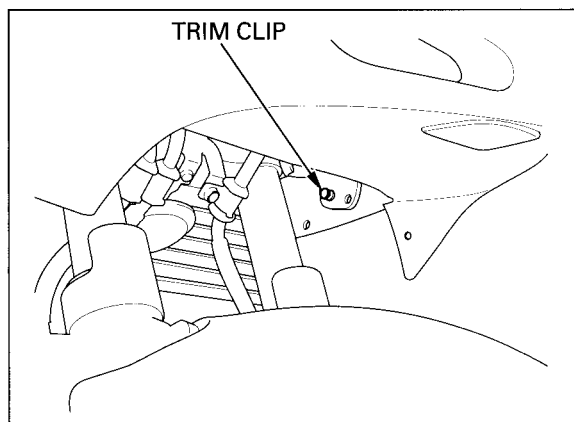

Release the upper cowl from the rearview mirror bracket and pull the upper cowl forward.



Disconnect the headlight sockets and position light connector, then remove the upper cowl.

Remove the bolts and headlight unit (page 19-5).

