


FRAME/BODY PANELS/EXHAUST SYSTEM

Disconnect the BARO sensor connector.




Disconnect the seat lock cable.

Disconnect the tail/brake light connectors and rear turn signal connectors.

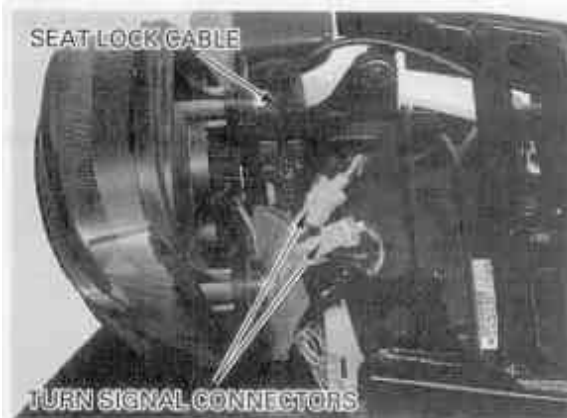

Remove the retaining band and ECM (Engine Control Module), then disconnect the multi-connectors.

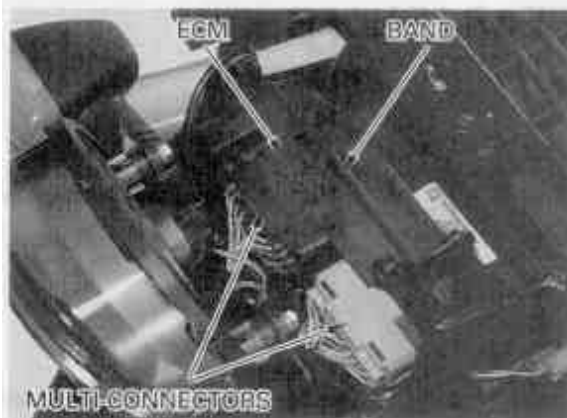

Remove the bolt and rear brake reservoir.

