


Check for continuity between the No. 1 injector and ground.

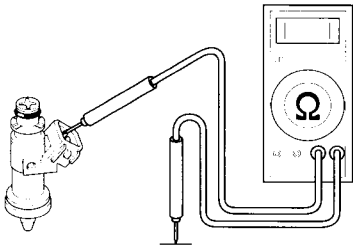

**Connection:**

Black/White (+) – Ground (–)


**Standard:** No continuity

Continuity

• Faulty No. 1 injector

No continuity

Turn the ignition switch ON.  
Measure the voltage between the No. 1 injector connector of the wire harness side and ground.

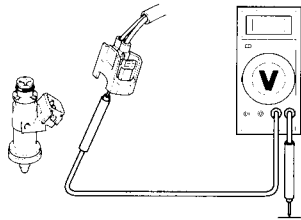

**Connection:**

Black/White (+) – Ground (–)


**Standard:** Battery voltage

Out of range

• Open or short circuit in Black/White wire

Voltage exists

Turn the ignition switch OFF.  
Connect the No. 1 injector connector.

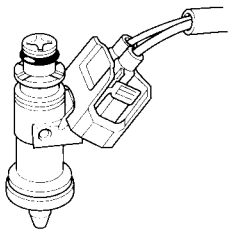

Disconnect the ECM connectors.  
Connect the test harness and test pin box to the wire harness connectors.

