

Connect the fuel pump 2P (Brown) connector.




Connect the fuel tank air vent tube and overflow tube to the fuel tank.



Connect the fuel return tube to the throttle body.

Connect the fuel tube banjo to the throttle body with new sealing washers. While pushing the fuel tube banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.

**TORQUE:** 22 N·m (2.2 kgf·m , 16 lbf·ft)

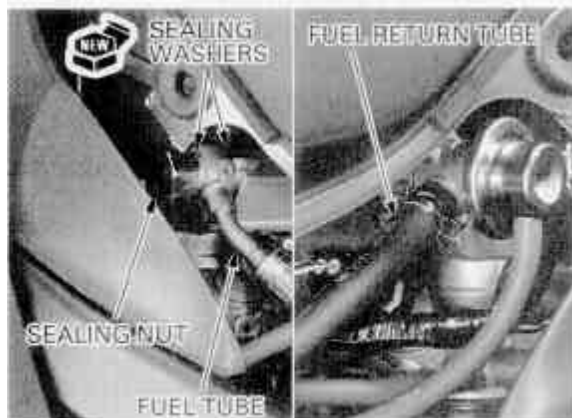

Remove the support tools from the rear end of the fuel tank.

Install the inner cover boss into the fuel tank grommets.

