


FUEL SYSTEM (Programmed Fuel Injection)

Remove the seal ring, O-ring and cushion ring.

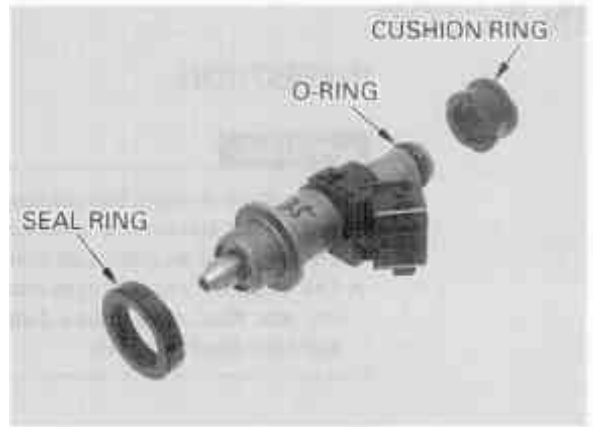

INSTALLATION

Replace the seal ring, cushion ring and O-ring with new ones as a set.

Apply oil to the new O-ring.
Install the new seal ring, cushion ring and O-ring.

CAUTION:

Be careful not to damage the O-ring when installing it.



Install the fuel injectors into the throttle body.

CAUTION:

Be careful not to damage the seal ring when installing the injector into the throttle body.



Install the fuel pipe assembly over the fuel injectors.

CAUTION:

Be careful not to damage the O-rings.

