


Installation is in the reverse order of removal.

NOTE:


Install the bank angle sensor with its "UP" mark facing up.

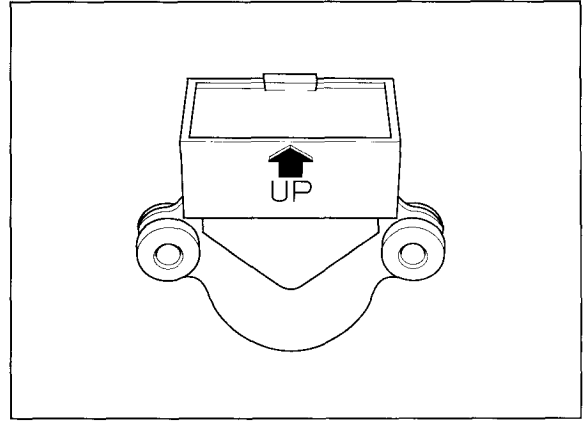

ENGINE STOP RELAY

INSPECTION

Disconnect the engine stop relay 4P connector, remove the engine stop relay.

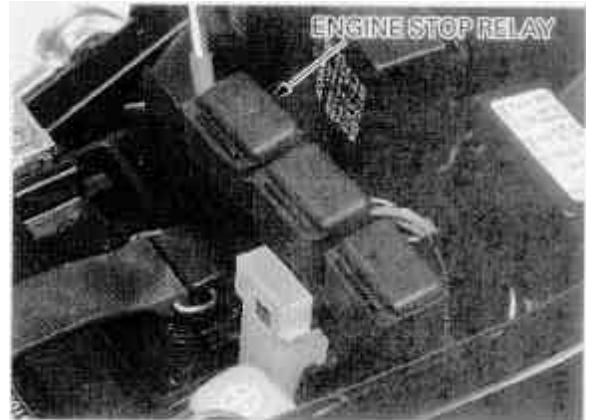

Connect the ohmmeter to the engine stop relay connector terminals.


CONNECTION: Black/White—Red/White

Connect the 12V battery to the following engine stop relay connector terminals.

CONNECTION: Red/Orange—Black

There should be continuity only when the 12V battery is connected.

If there is no continuity when the 12V battery is connected, replace the engine stop relay.

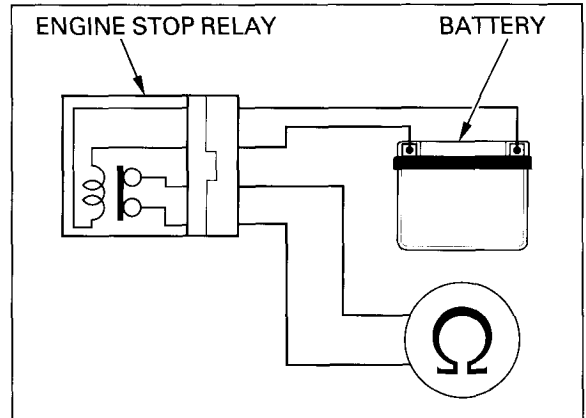

KNOCK SENSOR

REMOVAL/INSTALLATION

Disconnect the knock sensor connector. Remove the knock sensor.

Installation is in the reverse order of removal.

TORQUE: 31 N·m (3.2 kgf·m , 23 lbf·ft)

