

ALTERNATOR COVER REMOVAL

- Remove the following:
- Lower cowl (page 2-3)
 - Seat (page 2-2)
 - Seat cowl (page 2-2)

Disconnect the alternator 3P (White) connector.

Remove the alternator cover SH bolts and alternator cover.


CAUTION:

The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.

NOTE:

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

Remove the gasket and dowel pin.

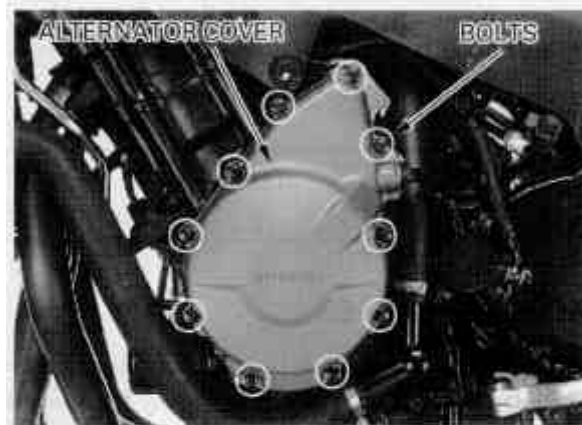

STATOR

REMOVAL

- Remove the alternator wire grommet from the alternator cover.
Remove the socket bolt and stator wire holder.
Remove the socket bolts and stator.

