

FRONT WHEEL/SUSPENSION/STEERING

Remove the steering stem nut cap.




Loosen the steering stem nut.

Remove the following:

- Fork legs (page 13-16).
- Handlebar (page 13-3)

Remove the stem nut and the top bridge.

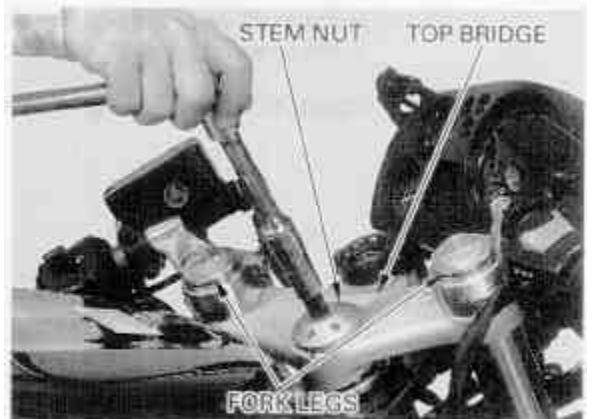

Straighten the tabs of the lock washer.

Remove the lock nut and lock washer.



Remove the steering stem bearing adjusting nut using the special tool.

TOOL:
Steering stem socket 07916-3710101

