

## Wheel bearing installation

### CAUTION:

*Never install the old bearings, once the bearings has been removed, the bearing must be replaced with new ones.*

Drive in a new right bearing squarely.  
Install the distance collar, then drive in the left side bearing.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 52 × 55 mm</b>	07746-0010400
<b>Pilot, 20 mm</b>	07746-0040500

### Driven flange bearing installation

Drive the new driven flange bearing into the driven flange using the special tools.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 62 × 68 mm</b>	07746-0010500
<b>Pilot, 25 mm</b>	07746-0040600

Install the driven flange collar.

Install the wheel damper rubbers into the wheel hub.

Apply oil to the new O-ring and install it into the groove of the wheel hub.

