


FUEL RESERVE SENSOR INSPECTION

Connect the fuel reserve sensor 3P (Black) connector.

Turn the ignition switch is ON and make sure the fuel reserve indicator come ON.

If the fuel reserve indicator does not indicate properly, check for the following.

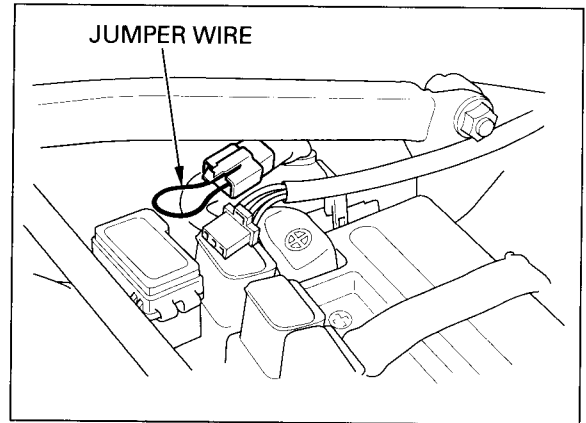

Disconnect the fuel reserve sensor 3P (Black) connector.


Short the wire harness side connector Brown/Black and Green/Black terminals with a jumper wire.

Turn the ignition switch is ON and make sure the fuel reserve indicator come ON.

If the indicator come ON, replace the fuel unit.

If the indicator still not come ON, check for open or short circuit in wire harness.

Wire harness is OK, replace the fuel meter unit (page 19-8).

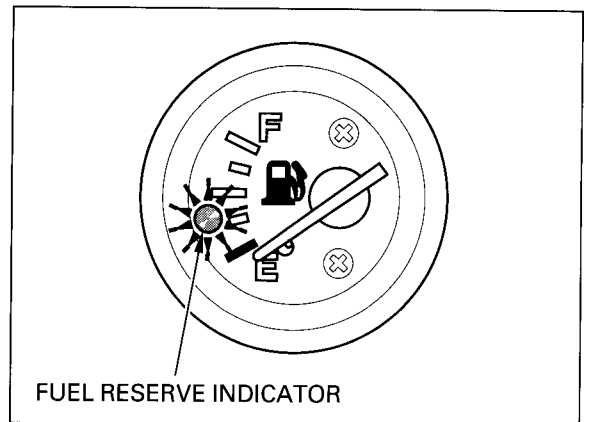

INSTALLATION

Check the O-ring is in good condition.

Install the fuel unit into the fuel tank.

CAUTION:

Be careful not to damage the float arm.



Install and tighten the nuts securely.

Clamp the wire to the clamp.

Install the fuel tank (page 5-54).

