

LIGHTS/METERS/SWITCHES

1. Short the black and gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

↓
Light comes on

↓
Light does not come on

- Broken wire harness

2. Check for continuity between the green terminal of the relay connector and ground.

↓
Continuity

↓
No continuity

- Broken ground wire

- Faulty turn signal relay.
• Poor connection of the connector.