


Remove the fuel tank mounting collar and temporarily install the fuel tank mounting bolts.




*Lift the tank slowly, being careful not to overextend the fuel hose.*

Support the front end of the fuel tank using a suitable support as shown.

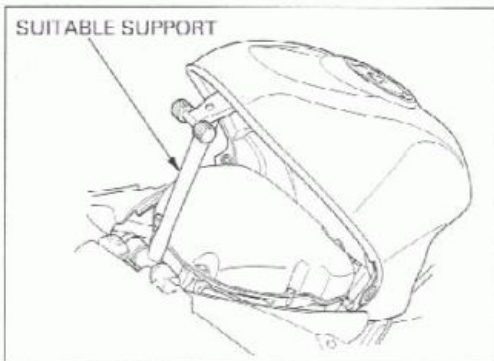

Disconnect the IAT (Intake Air Temperature) sensor connector.

Remove the screws and air cleaner housing cover.

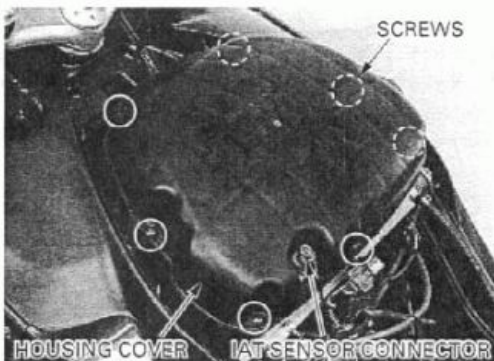

Remove and discard the air cleaner element in accordance with the maintenance schedule (page 3-3, 4).

Also replace the air cleaner element anytime it is excessively dirty or damaged.

Install the removed parts in the reverse order of removal.

