


Check that the sealing washer on the drain bolt is in good condition, and replace if necessary. Install and tighten the drain bolt.

**TORQUE:** 29 N·m (3.0 kgf·m , 22 lbf·ft)

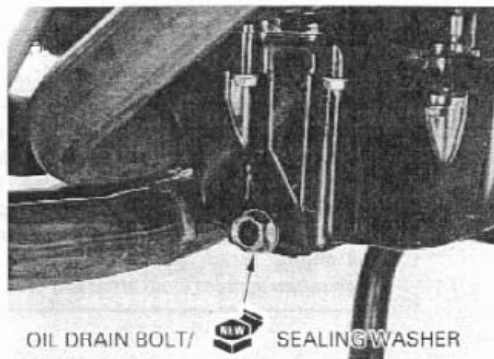

OIL DRAIN BOLT/ **NEW** SEALING WASHER

Apply oil to the new oil filter O-ring.



OIL FILTER CARTRIDGE

Install the new oil filter and tighten it to the specified torque.

**TOOL:**

**Oil filter wrench** 07HAA-PJ70100

**TORQUE:** 10 N·m (1.0 kgf·m, 7 lbf·ft)



OIL FILTER WRENCH OIL FILTER CARTRIDGE

Fill the crankcase with the recommended engine oil.

**OIL CAPACITY:**

3.8 ℓ (4.0 US qt , 3.3 Imp qt)

3.9 ℓ (4.1 US qt , 3.4 Imp qt)

Install the oil filler cap.

Start the engine and let it idle for 2 to 3 minutes. Stop the engine and recheck the oil level. Make sure there are no oil leaks.



OIL FILLER CAP