


## BRAKE PAD WEAR

### FRONT BRAKE PADS

Check the brake pad for wear.  
Replace the brake pads if either pad is worn to the bottom of the wear limit groove.


Refer to page 15-10 for brake pad replacement.

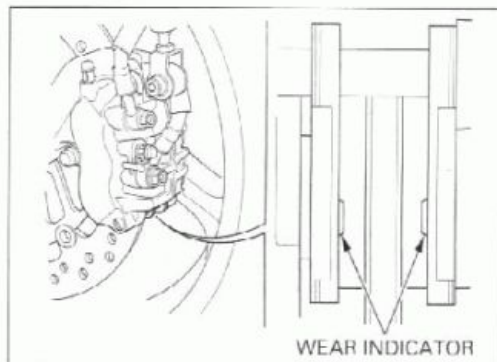

### REAR BRAKE PADS

Check the brake pad for wear.  
Replace the brake pads if either pad is worn to the bottom of the wear limit groove.

Refer to page 15-11 for brake pad replacement.

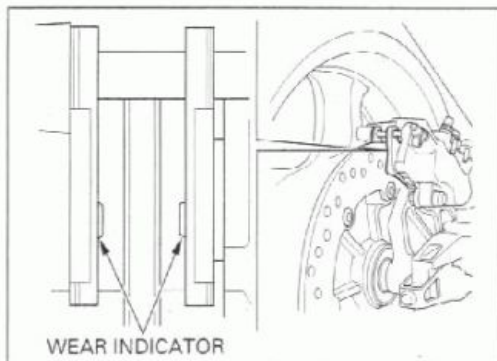

## BRAKE SYSTEM

### INSPECTION

This model is equipped with a Linked Braking System. Check the front and rear brake operation as follows:

Place the motorcycle on its center stand and shift the transmission into neutral.

Push the left front brake caliper upward by hand.  
Make sure the rear wheel does not turn while the left front brake caliper is pushed.

