

5.FUEL SYSTEM (Programmed Fuel Injection)

SERVICE INFORMATION	5-1	STARTER VALVE SYNCHRONIZATION	5-83
TROUBLESHOOTING	5-3	FAST IDLE WAX UNIT	5-85
SYSTEM LOCATION ('99)	5-4	BARO/MAP SENSOR	5-87
SYSTEM DIAGRAM ('99)	5-5	IAT SENSOR	5-88
SYSTEM LOCATION (After '99)	5-6	ECT SENSOR	5-88
SYSTEM DIAGRAM (After '99)	5-7	CAM PULSE GENERATOR	5-88
PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM	5-8	TP SENSOR	5-90
PGM-FI SELF-DIAGNOSIS MALFUNCTION INDICATOR FAILURE CODES	5-12	BANK ANGLE SENSOR	5-91
FUEL LINE INSPECTION	5-55	ENGINE STOP RELAY	5-93
FUEL PUMP	5-58	KNOCK SENSOR	5-93
FUEL CUT-OFF RELAY	5-60	ECM (ENGINE CONTROL MODULE)	5-93
FUEL TANK	5-61	PAIR CONTROL SOLENOID VALVE	5-94
AIR CLEANER HOUSING	5-65	EVAP PURGE CONTROL SOLENOID VALVE (CALIFORNIA TYPE ONLY)	5-95
THROTTLE BODY	5-68	O ₂ SENSOR (AFTER '99 CALIFORNIA TYPE ONLY)	5-96
INJECTOR	5-76		
STARTER VALVE	5-79		

SERVICE INFORMATION

GENERAL

▲WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.
- Be sure to relieve the fuel pressure while the engine is off.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.