


## PGM-FI MALFUNCTION INDICATOR 7 BLINKS (ECT SENSOR)

Turn the ignition switch to "OFF".

Disconnect the ECT sensor 3P connector.  
Check for loose or poor contact on the ECT sensor connector.

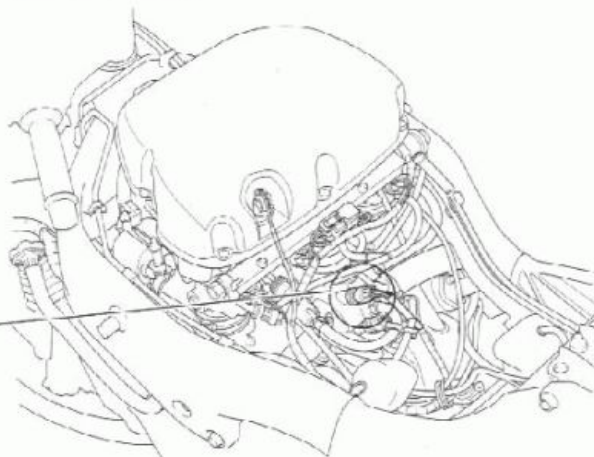

Connect the ECT sensor connector.  
Place the motorcycle on its side stand.  
Turn the ignition switch to "ON".




Check that the malfunction indicator blinks.

Does not blink

• Loose or poor contacts on the ECT sensor connector.

7 blinks

Turn the ignition switch to "OFF".  
Disconnect the ECT sensor connector.  
Measure the resistance at the ECT sensor terminals.

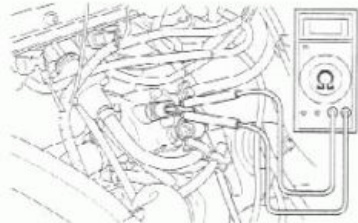

Connection: Pink (+) - Green/orange (-)  
(sensor side terminals)

Standard: 2.2 - 2.7 k $\Omega$  (20 °C/68 °F)

Abnormal

• Faulty ECT sensor.

Normal