


Measure the voltage at the O₂ sensor wire harness side connector terminal and ground.

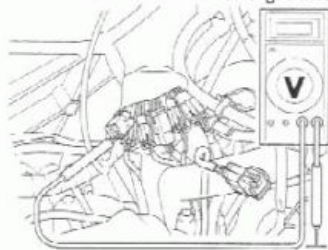

Connection: Black/white (+) – Ground (–)
Standard: Battery voltage

No voltage →

- Open circuit in Black/white wire between the O₂ sensor and engine stop relay.

Battery voltage

Turn the ignition switch to "OFF".

Connect the O₂ sensor 4P connectors.



Disconnect the ECM connectors.
Connect the test harness and test pin box to the wire harness connectors.

