


Measure the voltage at the test pin box terminals.

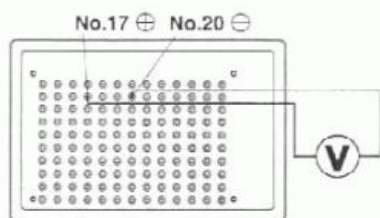

Connection: No.17 (+) – No.20 (–)
Standard: Battery voltage

No voltage →

- Open circuit in Black/green wire between the ECM connector and O₂ sensor 4P connectors.

Battery voltage →

- Replace the ECM and inspect again.