

REMOVAL

▲WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions.*
- *Be sure to relieve fuel pressure while the engine is off.*



CAUTION:

- *Before disconnecting the fuel hose, release the fuel pressure by loosening the service check bolt at the fuel tank.*
- *Always replace the sealing washer when the fuel tube banjo bolt is removed or loosened.*

Remove the fuel tank (page 5-61).

Remove the fuel pump mounting nuts.

Remove the fuel pump assembly and packing.

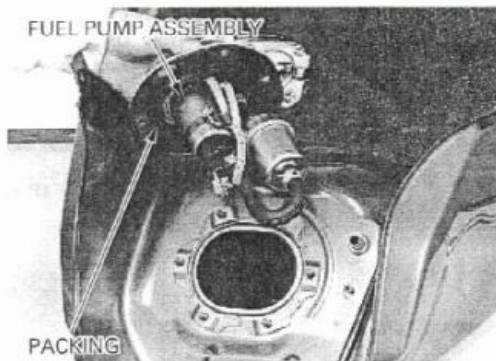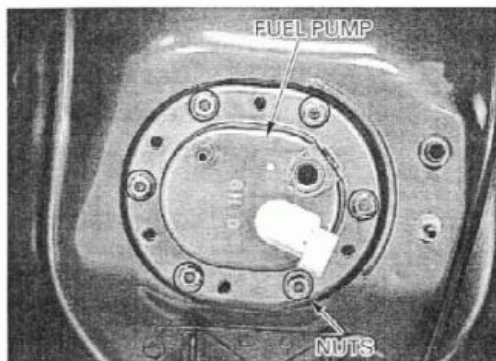


FUEL FILTER REPLACEMENT

Disconnect the fuel hoses from the fuel filter.
Remove the screws and fuel filter.

Install the fuel filter in the reverse order of removal.

NOTE:

Note the direction of the fuel filter.

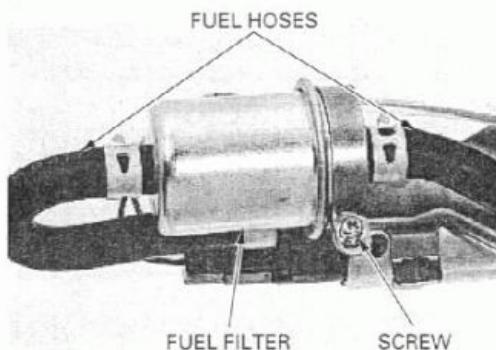

INSTALLATION

Place a new packing onto the fuel tank.

NOTE:

Always replace packing with a new one.

Install the fuel pump being careful not to damage the fuel pump wire.

