


FUEL SYSTEM (Programmed Fuel Injection)

Install and tighten the fuel pump mounting nuts in the sequence shown.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

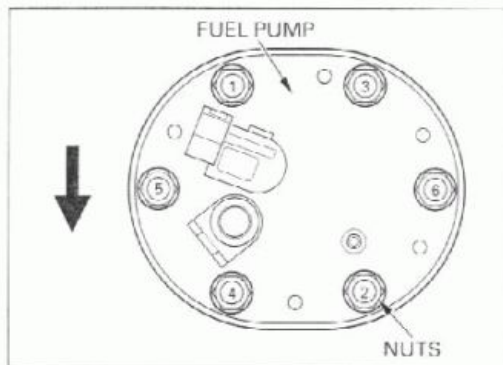


FUEL CUT-OFF RELAY

INSPECTION

Remove the seat (page 2-2).

Disconnect the fuel cut-off relay 4P connector and remove the fuel cut-off relay.

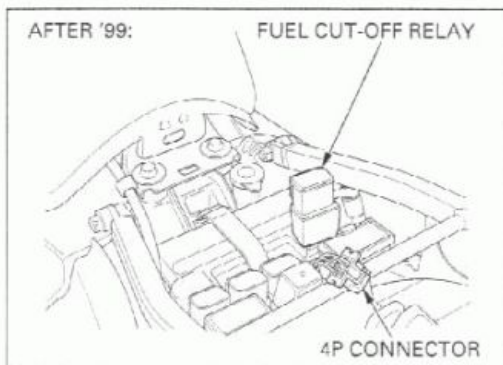

Connect the ohmmeter to the fuel cut-off relay connector terminals.

CONNECTION: Black/white – Brown

Connect the 12-V battery to the following fuel cut-off relay connector terminals.

CONNECTION: Brown/black – Black/white

There should be continuity only when the 12-V battery is connected.

If there is no continuity when the 12-V battery is connected, replace the fuel cut-off relay.

