


Install the MAP sensor aligning its boss with the hole in the fuel pipe.

Tighten the mounting screw securely.

Connect the MAP sensor vacuum hose.


Install the throttle body (page 5-74).

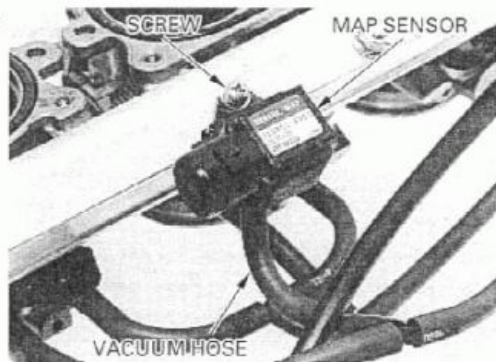

STARTER VALVE


DISASSEMBLY

Turn each starter valve adjusting screw in, counting the number of turns until it seats lightly. Record the number of turns.

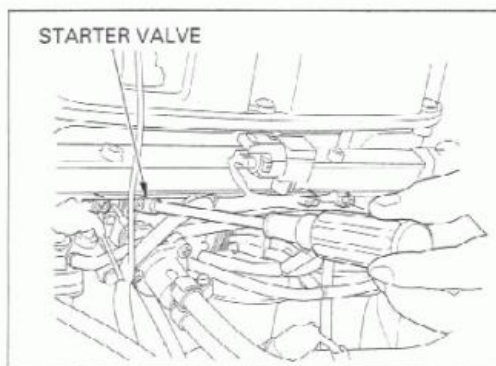

No. 3/4 starter valve:

Remove the starter valve arm screws and starter valve arm.

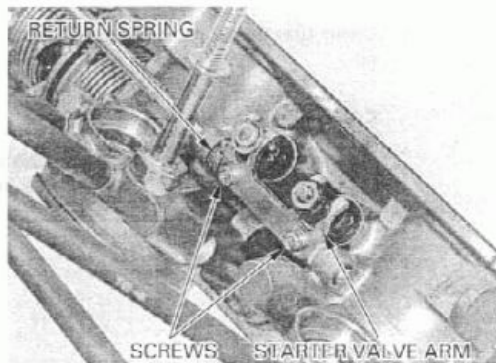

No. 1/2 starter valve:

Remove the screws and wax unit body mounting screws.

