



FUEL SYSTEM (Programmed Fuel Injection)

Connect the vacuum gauge adaptors to the vacuum joints, then connect the hoses to the vacuum gauge.

Connect the tachometer.

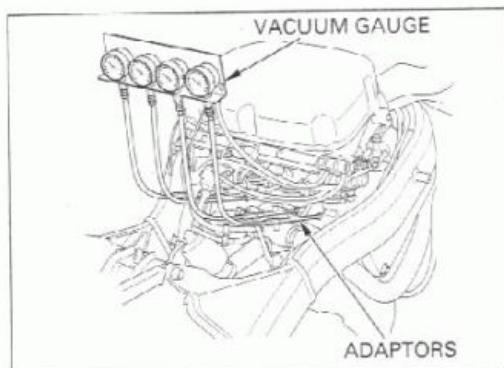

Disconnect the PAIR air suction hoses from the reed valve covers and plug the cover.

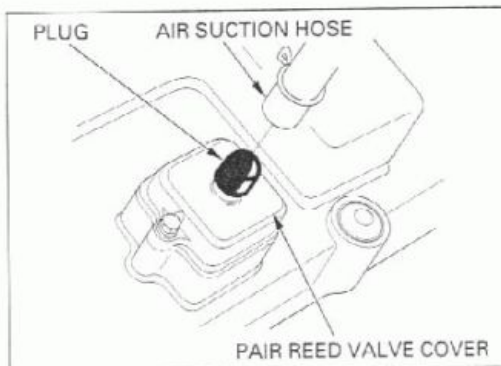

Start the engine and adjust the idle speed.

IDLE SPEED: 1,100 ± 50 rpm



The No. 3 starter valve cannot be adjusted, it is the base starter valve. Adjust each intake vacuum pressure with the No. 3 cylinder.

