


## IAT SENSOR

### REMOVAL/INSTALLATION

Support the front end of the fuel tank (page 3-6).

Disconnect the IAT sensor connector.  
Remove the screws and IAT sensor from the air cleaner housing.

Installation is in the reverse order of removal.

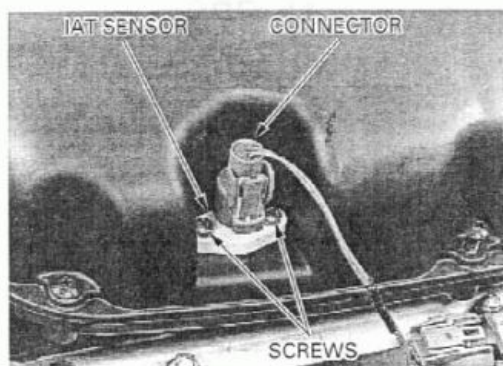

## ECT SENSOR

### REMOVAL/INSTALLATION

#### NOTE:

Replace the ECT sensor while the engine is cold.

Drain the coolant from the system (page 6-5).  
Support the front end of the fuel tank (page 3-6).


Disconnect the ECT sensor connector from the sensor.  
Remove the ECT sensor and sealing washer.

*Always replace a sealing washer with a new one.*

Install the new sealing washer and ECT sensor.  
Tighten the ECT sensor to the specified torque.

**TORQUE:** 10 N·m (1.0 kgf·m, 7 lbf·ft)

Fill the cooling system with recommended coolant (page 6-6).

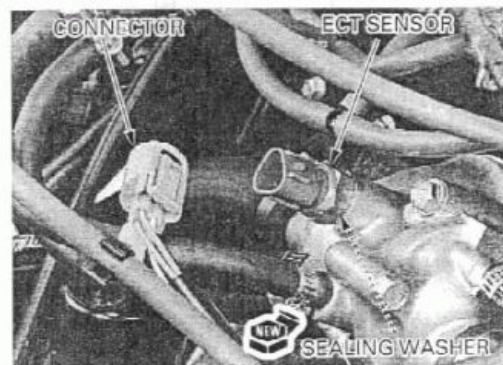

## CAM PULSE GENERATOR

### REMOVAL/INSTALLATION

Support the front end of the fuel tank (page 3-6).

Disconnect the cam pulse generator 2P natural connector.

