


Check the resistance between the terminals of the PAIR solenoid valve.

**STANDARD:** 20–24  $\Omega$  (20 °C/68 °F)

If the resistance is out of specification, replace the PAIR solenoid valve.

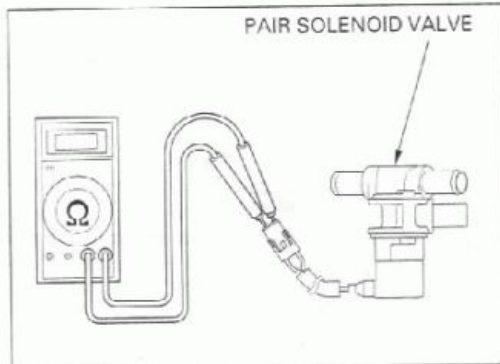

## EVAP PURGE CONTROL SOLENOID VALVE (CALIFORNIA TYPE ONLY)

### REMOVAL


Support the rear end of the fuel tank (page 5-55).

Disconnect the EVAP purge control solenoid valve 2P connector.

Disconnect the air hoses from the EVAP purge control solenoid valve.

Remove the bolts and EVAP purge control solenoid valve bracket assembly.


Installation is in the reverse order of removal.

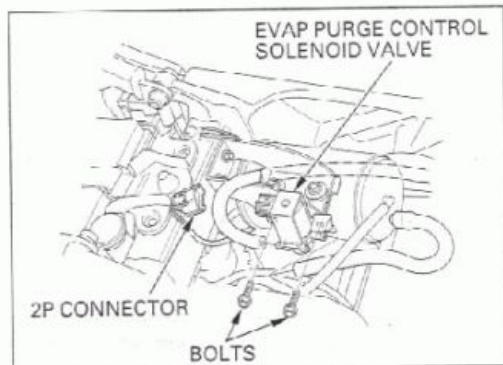

### INSPECTION

Remove the EVAP purge control solenoid valve.

Check that the air should not flow from (A) to (B), only when the 12-V battery is connected to the EVAP purge control solenoid valve terminals.

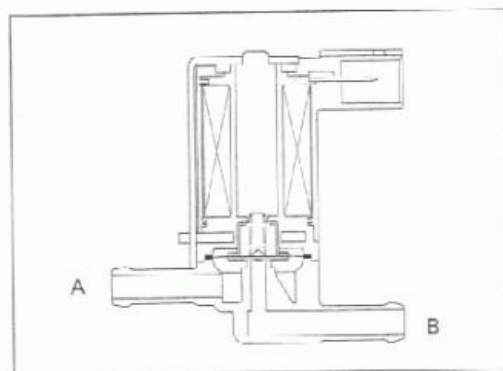

Check the resistance between the terminals of the EVAP purge control solenoid valve.

**STANDARD:** 30–34  $\Omega$  (20 °C/68 °F)

If the resistance is out of specification, replace the EVAP purge control solenoid valve.

