

Loosen the rear lower engine hanger adjusting bolt lock nut while holding the adjusting bolt using the special tool.


TOOL:

Lock nut wrench

07VMA-MAT0100 or
07VMA-MAT010A
(U.S.A. only)




Turn the adjusting bolt with the engine hanger bolt counterclockwise to release the adjusting bolt from the engine.

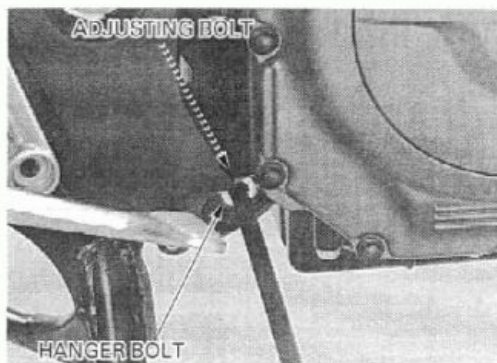

Support the engine using a jack or other adjustable support to ease of engine hanger bolts removal.

Remove the right engine hanger bolt, washer and distance collar.

Remove the left engine hanger bolts.

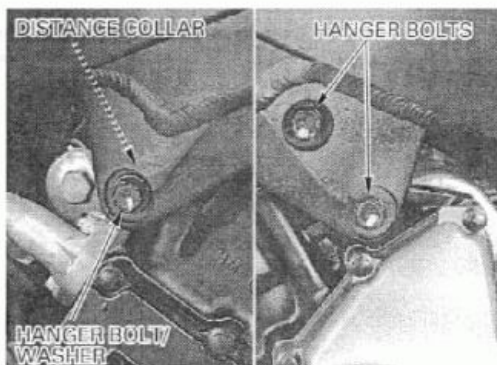

Remove the rear/upper engine hanger bolt, distance collars and spacer.

