


Hold the flywheel using the flywheel holder, then remove the flywheel bolt.

**TOOL:**

**Flywheel holder**

07725-0040000  
(Equivalent commercially available in U.S.A.)

Remove the washer.

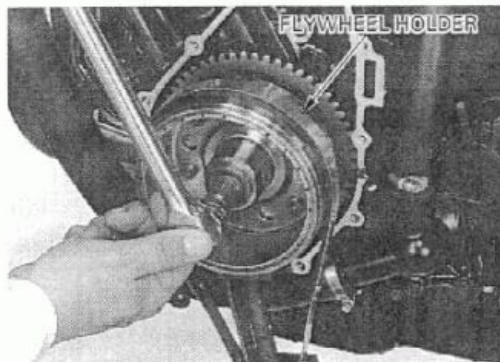


Remove the flywheel using the special tool.


**TOOL:**

**Rotor puller**

07733 0020001 or  
07933-3950000

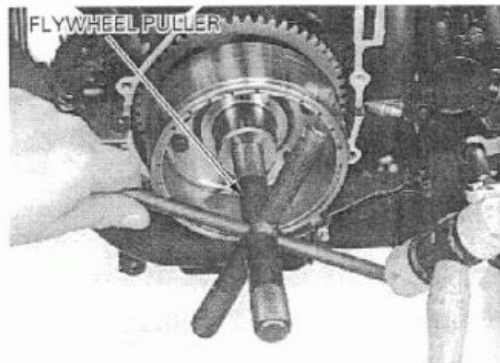

Remove the woodruff key.

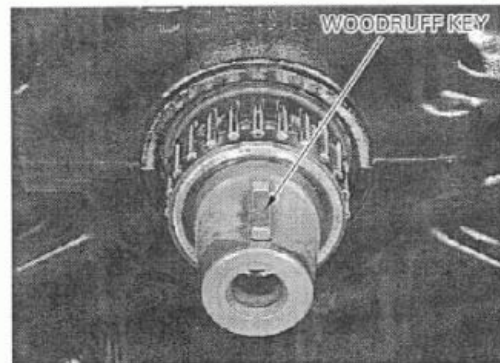

Check the starter idle gear and shaft for wear or damage.

