

PISTON/CONNECTING ROD

PISTON/CONNECTING ROD REMOVAL

CAUTION:


Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

NOTE:


Mark all parts during removal so they can be replaced in their original locations.

Remove the nuts and connecting rod bearing cap.

Remove the piston/connecting rod assembly from the top of the cylinder.

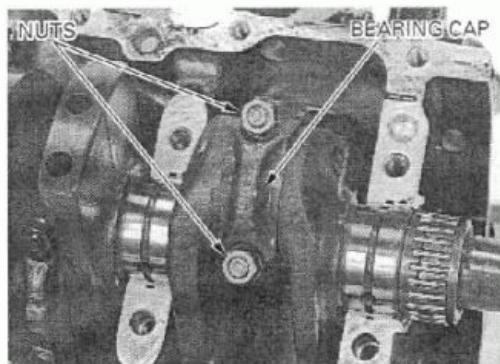


PISTON/CONNECTING ROD ASSEMBLY

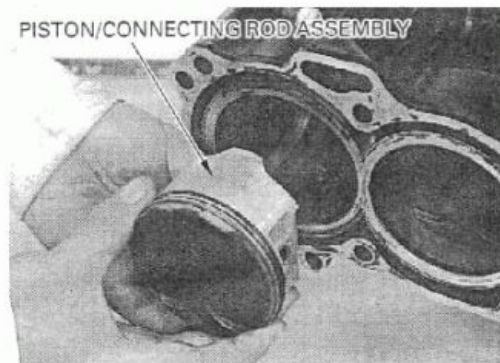

PISTON REMOVAL

Remove the piston pin clip with pliers. Press the piston pin out of the piston and remove the piston from the connecting rod.

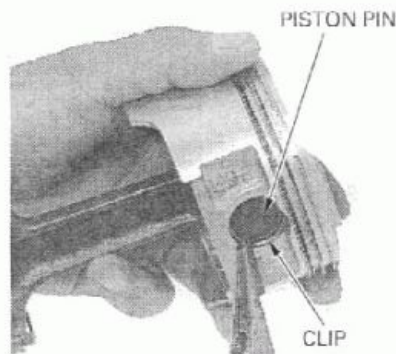

PISTON DISASSEMBLY

Remove the piston rings.

NOTE:

Do not damage the piston rings during removal.

