

Apply grease to the dust seal lips, then install the dust seals and pivot collars.

INSTALLATION

Install the following:



- Shock link
- Shock link socket bolt/nut
- Shock arm plates with their "FR" mark facing to the front
- Shock arm plate bolt/nut (swingarm side)
- Shock arm plate bolt/nut (shock link side)
- Shock absorber lower mounting bolt/nut

Tighten the shock link nut (frame side) to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m , 43 lbf·ft)

Tighten the shock arm plate bolts and shock absorber lower mounting nut to the specified torque.

TORQUE: 42 N·m (4.3 kgf·m , 31 lbf·ft)

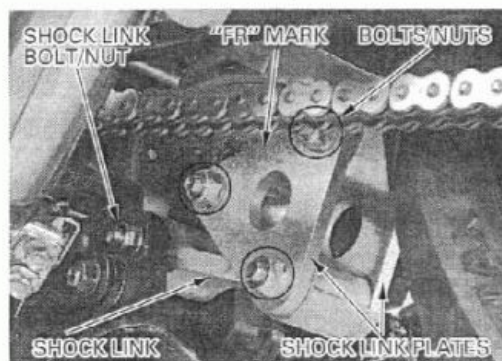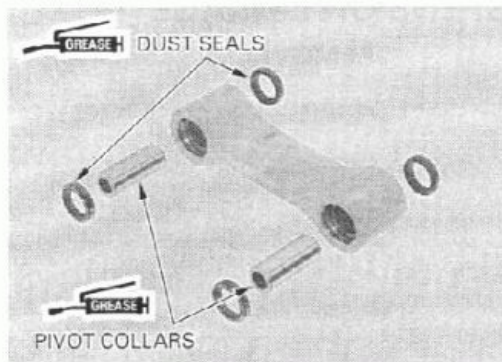


SWINGARM

REMOVAL

Remove the rear wheel (page 14-3).

Remove the socket bolts and drive chain case.

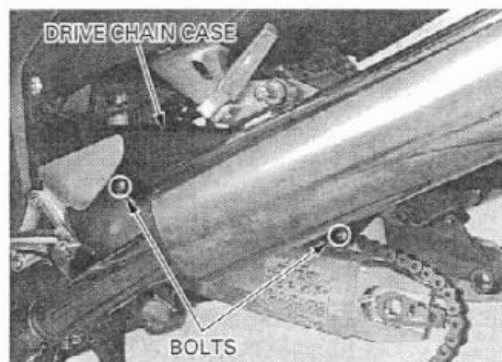

Remove the SH bolts and brake hose guides.

