
Place the master cylinder assembly on the handle-

Align the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

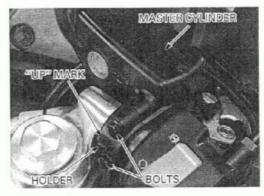


Install the brake hose eyelet with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Connect the brake light switch wire connectors.

Fill the reservoir to the upper level and bleed the brake system (page 15-7).

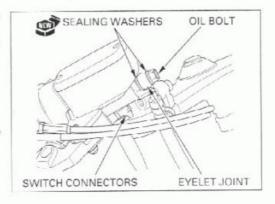


SECONDARY MASTER CYLINDER

REMOVAL

Drain the pedal brake hydraulic system (page 15-5).

Remove the left front brake caliper joint bolt.

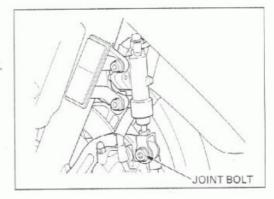

Remove the brake hose oil bolt, sealing washers, brake hose eyelet.

CAUTION:

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Remove the secondary master cylinder mounting bolts and reflector.

