


HYDRAULIC BRAKE

Remove the exhaust pipe mounting nut, main footpeg mounting bolts and main footpeg.




Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

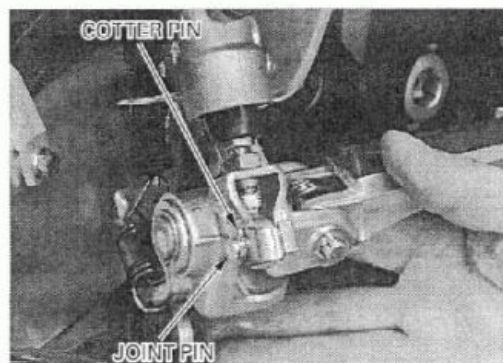

Remove the screw and reservoir hose joint from the master cylinder.

Remove the mounting bolts and master cylinder from main footpeg.

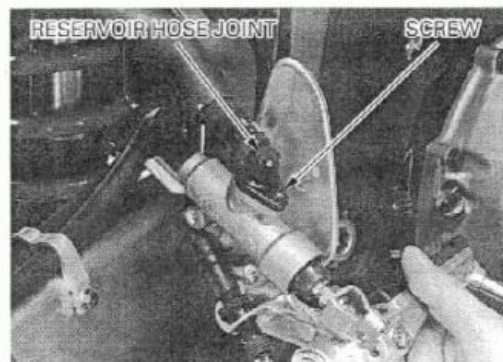

DISASSEMBLY

Remove the boot.

Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:

Snap ring pliers 07914-SA50001 or
 07914-3230001

Remove the push rod, master piston and spring.

Clean the inside of the cylinder with brake fluid.

