


## HYDRAULIC BRAKE

Place the piece of wood sheet under the caliper pistons.

*Mark the pistons to ensure correct reassembly.*  
Apply small squirts of air pressure to the fluid inlet to remove the pistons.

### **WARNING**

*Do not use high pressure air or bring the nozzle too close to the inlet.*

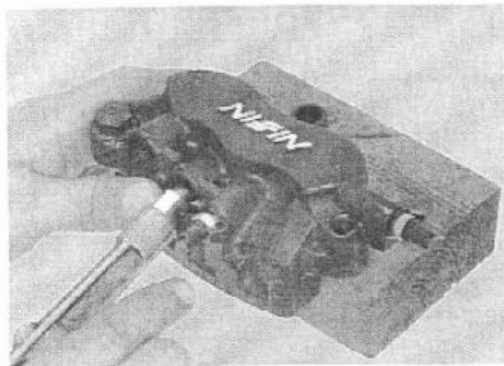


Push the dust seals and piston seals in and lift them out.

### **CAUTION:**

*Be careful not to damage the piston sliding surface.*

Clean the seal grooves with clean brake fluid.

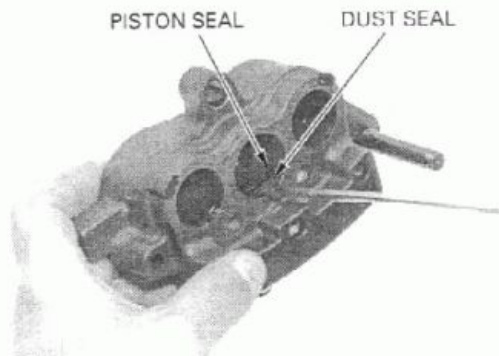

## INSPECTION

Check the caliper cylinder for scoring or other damage.


Measure the caliper cylinder I.D.

### **SERVICE LIMITS:**

**Front:** 22.710 mm (0.8941 in)

**Center:** 25.460 mm (1.0024 in)

**Rear:** 22.710 mm (0.8941 in)

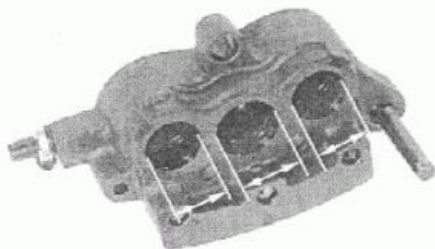

Check the caliper pistons for scratches, scoring or other damage.

Measure the caliper piston O.D.

### **SERVICE LIMITS:**

**Front:** 22.560 mm (0.8882 in)

**Center:** 25.310 mm (0.9965 in)

**Rear:** 22.560 mm (0.8882 in)

