


**BRAKE PEDAL****REMOVAL**

Loosen the rear master cylinder mounting bolts.

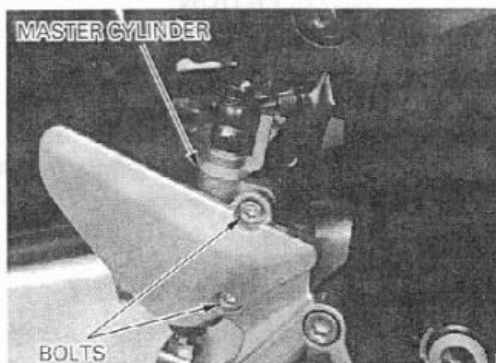


Remove the exhaust pipe mounting nut, main footpeg mounting bolts and main footpeg.



Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

Remove the bolts and master cylinder assembly.

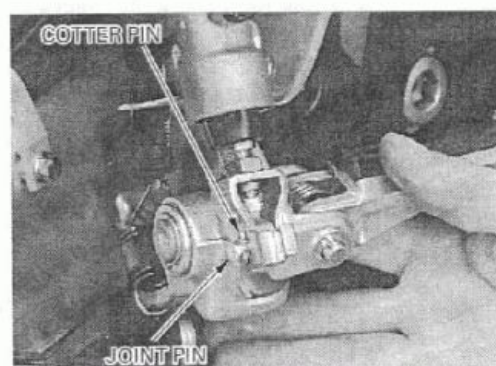

Unhook the switch spring and remove the brake light switch from the step holder. Unhook the brake pedal return spring.

Remove the snap ring, washer and brake pedal from the footpeg.

